



- No.6A 2017
- Air Conditioning
- Electrical Accessories
- Rotating Electrical
- Engine Cooling
- Engine Management
- Tools & Equipment
- Underbody & Suspension
- Workshop Consumables

NICE WHEEL RUT

NICE WHEEL NUT INDICATORS ARE PLACED OVER THE TOP OF THE WHEEL NUT ONCE IT HAS BEEN TOROUED TO THE CORRECT SPECIFICATION.

The NICE Wheel Nut Indicators should be aligned with each other in a regular pattern that allows individual indicators to freely rotate should the wheel nut loosen. When or if a wheel nut loosens the indicators will turn with the nut thus breaking the pattern and visibly identifying a safety hazard.













